



GT Notify

SMS Notification System

Installation Guide

Version 1.0
15 September 2016



OVERVIEW

Objective

This user guide is to provide GT Notify SMS Notification system user on how to install and setup the system.

Document History

Version 1.0 15 September 2016 fourth edition for GT Notify version 4.xx

Trademarks

GT Notify and certain other trademarks and logos appearing on this document, are filed or registered trademarks of Grep Tech Pte Ltd in Singapore and/or in other countries. All other company and/or product names mentioned may be filed or registered trademarks of their respective owners.

Copyright

This manual is copyrighted by **Grep Tech** with all rights reserved. No part of this manual may be reproduced, modified or disclosed to third parties in any form without the prior written permission of **Grep Tech Pte Ltd**.

No Warranty / No Liability

This document is provided "as is". Grep Tech makes no warranties of any kind, either expressed or implied, including any implied warranties of merchantability, fitness for a particular purpose, or non infringement. The recipient of the documentation shall endorse all risks arising from its use. In no event shall Grep Tech be liable for any incidental, direct, indirect, consequential, or punitive damages arising from the use or inadequacy of the documentation, even if Grep Tech has been advised of the possibility of such damages and to the extent permitted by law.



INSTALLATION GUIDE

Packaging List:

GT Notify system come with the following items:

- 1 x GT Notify system
- 1 x Network Cable
- 1 x Power Adapter
- 1 x Start up Guide

Connecting GT Notify:

1. Using a pin to push the SIM card holder out, and insert the SIM card into the holder. Push back the SIM card holder.
2. Connect the network cable between the network switch / router and GT Notify network plug.
3. Connect the power adapter to the GT Notify power plug.

Login to GT Notify:

Settings of the GT Notify	The Default Network Settings	Current Network Settings
IP Address:	192.168.1.68	
Subnet mask:	255.255.255.0	
Gateway:	192.168.1.1	

Use a PC connected to the same network as the GT Notify. Open a browser from that PC. Enter the URL: <http://192.168.1.68> , You should see a login screen. Get the password from your vendor.

Note down your IP address.

IP address: _____

Basic Settings:

When you logged into the system for the first time, you need to configure some of the basic settings:

1. Password (change the admin password)
2. IP address (change the IP address of GT Notify system)
3. Phone Setting (setup admin phone and country code, e.g. +65)
4. Date and Time (setup time zone and system time, prefer to sync with NTP)


Send a Quick Message:

From SMS Service menu, select Quick SMS, enter a mobile number and a message then click send. If the mobile phone with that mobile number receive the message, that means the GT Notify system is ready for use.



CONNECTION

Connection Diagram

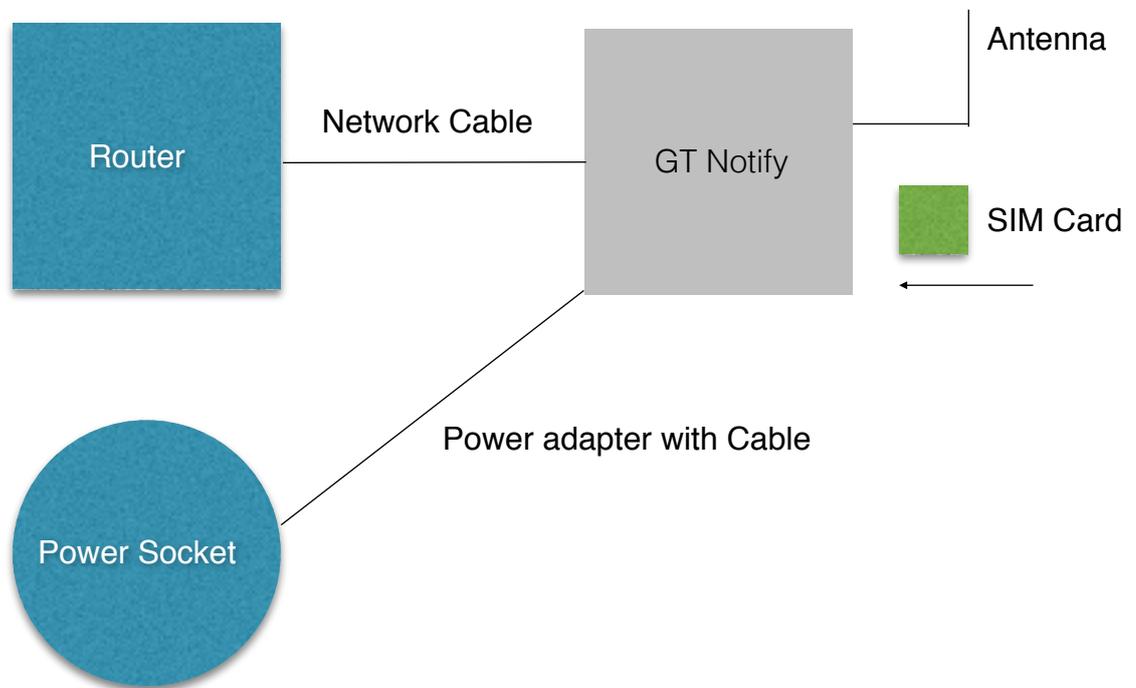




LOGIN

When GT Notify SMS system successfully powered up and connected to the network, user can access the system from any computer browser which is connected to the same network.

The default IP address is : 192.168.1.68

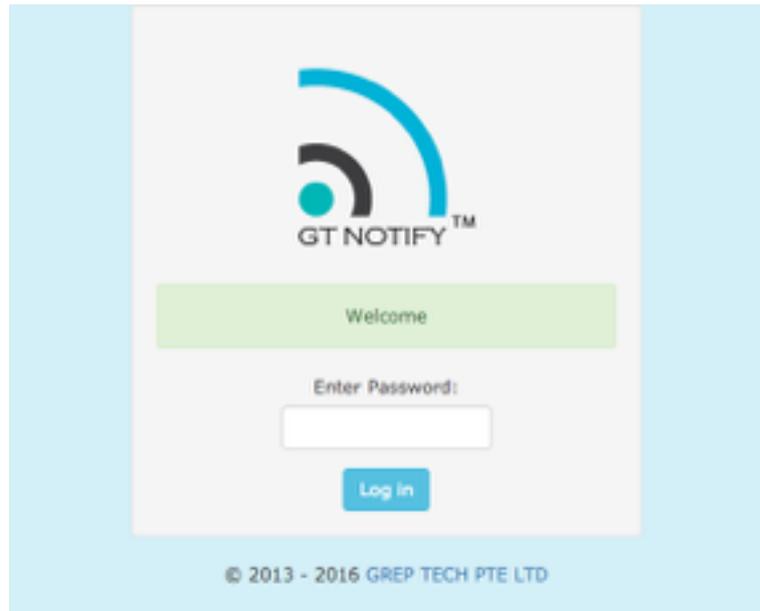



BASIC SETTINGS (SYSTEM -> SETTINGS)

Configure IP address


Configure the static IP address provided by network administrator. User's computer needs to be at the same network segment as the GT Notify system for the initial setup.

A screenshot of a web interface titled "Settings". At the top, there are several tabs: "Password", "IP Address" (which is highlighted with a red border), "Phone Setting", "Date and Time", "Language", and "Cloud". Below the tabs, the section is titled "Change IP Address". It contains three input fields: "IP Address:" with the value "192.168.1.88", "Netmask:" with the value "255.255.255.0", and "Gateway:" with the value "192.168.1.1". At the bottom left of the form, there are two buttons: "Submit" and "Cancel".

Settings
Password
IP Address
Phone Setting
Date and Time
Language
Cloud
Change IP Address
IP Address: 192.168.1.88
Netmask: 255.255.255.0
Gateway: 192.168.1.1
Submit Cancel

Set the timezone, Date and Time

The best way to get the accurate date and time is by using NTP service. If the system is able to access the internet, by tick the “sync with Internet Time (NTP)” and click <Submit>. GT Notify will try to get the internet time and set the correct time for the system.

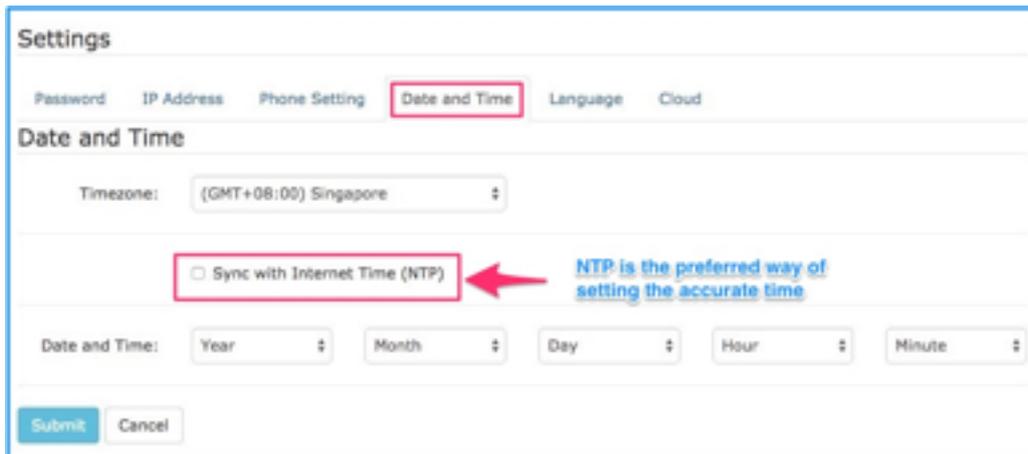

Settings

Password IP Address Phone Setting **Date and Time** Language Cloud

Date and Time

Timezone: (GMT+08:00) Singapore

Sync with Internet Time (NTP) NTP is the preferred way of setting the accurate time


Date and Time: Year Month Day Hour Minute

Submit Cancel

Setting the country code and admin phone

Please enter the correct country code, with the + sign in front.

Admin phone is NOT the number of the SIM card. It is the system owner's mobile number. The incoming message will auto forward to admin phone if there is no specific auto responder configured for that message.

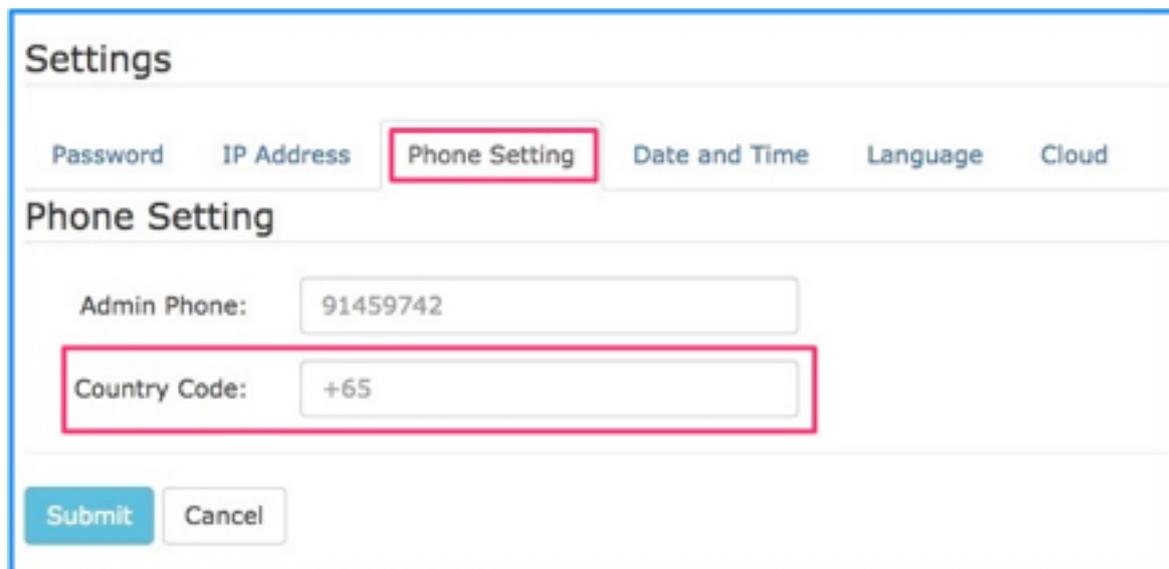

Settings

Password IP Address **Phone Setting** Date and Time Language Cloud

Phone Setting

Admin Phone:

Country Code:



SEND QUICK SMS

Quick SMS is a basic function of the GT Notify system, it is used for sending SMS to a single phone number. Most of the time, it is used as a testing tool to test whether system is able to send out SMS to a user's mobile phone. It also can be used for single user communication.

Quick SMS

Phone:

Message:

15 Characters